

# Pull Cord Cheat Sheet (ZB1.04 and Later)

Contents:

- 1) How to Ship
- 2) How to Water

## 1) How to Ship

- 1 - Pull Shipping cord to start moving
- 2 - Pull Programming cord and hold to slow down. Hold longer to slow down more.
- 3 - Release Programming cord and pull and hold again to speed up. Hold longer to speed up more
- 4 - Pull Shipping cord to stop moving
- 5 - The boomerang will stop on its own at home

## 2) How to Water

From Home:

- 1 - Test Phase
  - Pull Programming Cord to test valves (all valves start pulsing)
  - Pull and hold Shipping Cord to set purge time
  - Do not pull Shipping Cord if you don't want any purge/ don't want to change purge
- 2 - Water Phase
  - From Test Phase, pull the Programming Cord once to start moving
  - Pull and hold Programming cord in between hooks to slow down / speed up
  - Pull and hold Programming cord just before a hook to set water time for that layer
  - Pull Shipping cord to stop
  - Otherwise the Boomerang should stop at home.

From Anywhere Else:

- Pull the Programming Cord once to start moving
- Pull and hold Programming cord in between hooks to slow down / speed up
- Pull and hold Programming cord just before a hook to set water time for that layer
- Pull Shipping cord to stop
- Otherwise, the Boomerang should stop at home